

MHP


Configurations

Horizontal Units

Vertical Units


LEFT RETURN
FRONT WATER

LF

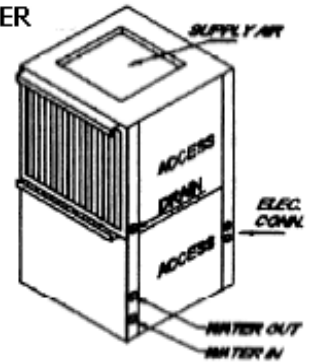


LEFT RETURN
BOTTOM WATER

LB

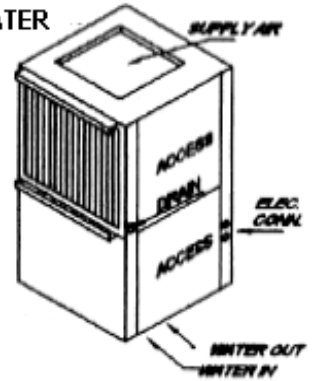


RIGHT RETURN
FRONT WATER

RF

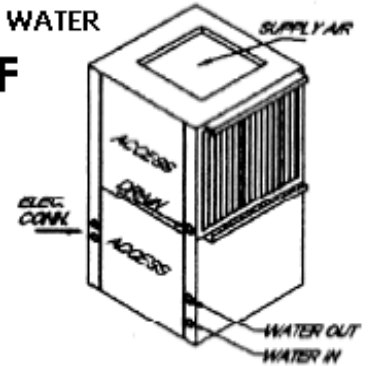


RIGHT RETURN
BOTTOM WATER

RB

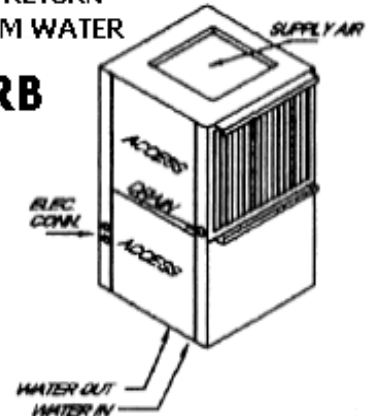


DISCHARGE OF
'LE' CONFIGURATION

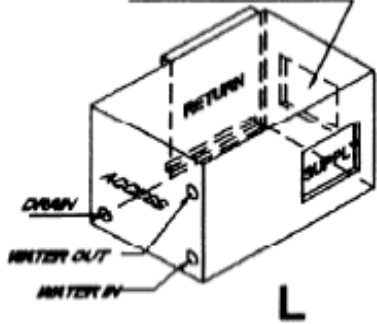

L


DISCHARGE OF
'RE' CONFIGURATION

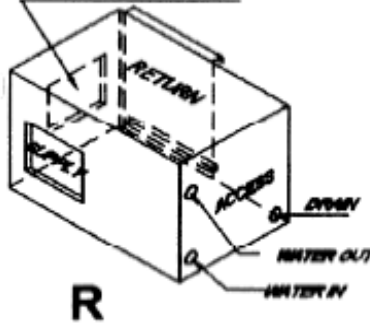

R


HP024H
& UP TO
HPx060H

DISCHARGE OF
'LE' CONFIGURATION

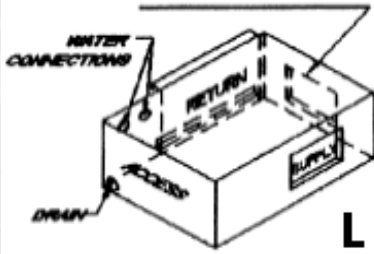

L


DISCHARGE OF
'RE' CONFIGURATION

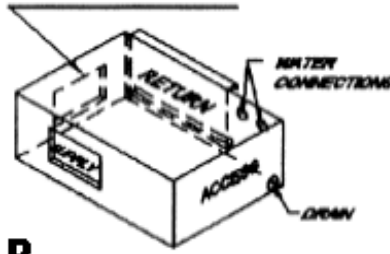


R

HP012H
& UP TO
HP018H

HPX090H
& UP TO
HPX0120H

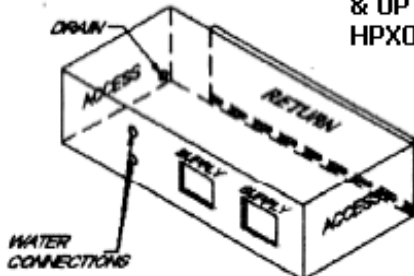

L

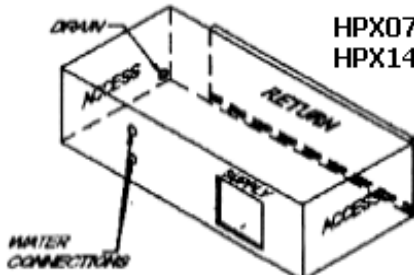

L

HPX072H &
HPX144H